

Laptop / Touch Screen Karaoke Players

Screen from USB Graphic Card stops work.

USB Graphic Card can stop work after Windows 7 or Windows 8 updates. If it is happened, go to "Control Panel" > "System" > "Device Manager" and in USB devices find your usb graphic card. Then make a right click on it and choose "Update Driver". Follow the instructions and update the driver from the internet. (You must have the internet connection.)

Unique solution ID: #1271

Author: Anton

Last update: 2013-06-20 20:20