

# Functionality(DVD)

## How to change the "Tempo" on DVD-203G/203G USB karaoke player.

To regulate the "Tempo" of the song, you can use the "Search" buttons on the front panel of the player (DVD-203G, DVD-203G USB). Or you can use the "LEFT ARROW" and "RIGHT ARROW" buttons on the remote control.

Unique solution ID: #1254

Author: Anton

Last update: 2015-09-15 18:34