

# Settings(199)

## **My JB-199 does not boot up without keyboard and mouse connected**

This is due to the setting in Bios of your JB-199. Enter the Bios by repeatedly pressing DEL button when starting up the JB-199. Go to the System Information and look for Keyboard and Mouse. Both should be "Enabled". Save and Exit out of the Bios and the JB-199 unit will boot without the keyboard and mouse. END

Unique solution ID: #1300

Author: Aaron Han

Last update: 2018-03-16 17:15