

Settings(199)

My karaoke words are running off the bottom of the of my TV monitor.

To adjust your TV screen follow the instructions below. (you will need a keyboard and a mouse)

1. In jukebox mode press the windows key on your keyboard.
2. In the desktop go to display properties
3. In display properties go to settings/advanced/displays/TV/adjustments
4. make sure overscan is not checked. Manually adjust your TV screen with the control keys provided.
5. Apply the settings and restart the unit.

Unique solution ID: #1050

Author: JB-199 Tech

Last update: 2009-03-18 05:22