

Functionality(199)

How do I play a cdg disc?

To play a cdg disc load your cd in the cd drive and select disc drive on your kj panel, front panel, or remote to select the song you want to play. Whenever switching between discs you have to ALWAYS use the open/close button on the remote or kj panel to open/close the cd drive.

Unique solution ID: #1048

Author: JB-199 Tech

Last update: 2009-03-18 06:03