

# Functionality(199)

## I encoded an audio cd but when I play it I hear the music just fine but the lyrics are not showing

There are two things that would cause this problem.

1. You are not using a compatible cd drive like plextor px760, px716, px712, px708.

2. You did not register the songs after you downloaded the cd. To register the songs go to menu/jukebox/register songs files and press the right arrow.

Unique solution ID: #1054

Author: JB-199 Tech

Last update: 2009-03-18 05:29