

Settings(DVD)

Why don't I have video on my television?

1. Make sure that you are connected to your television via the yellow cable to Video.
*Component,VGA, SCART have different settings.
2. Reset the players to factory defaults.
*Defaults will only use the composite(yellow) connection.
*The instructions to reset the player are here:
[How do I reset my player to factory settings?](#)

Unique solution ID: #1000

Author: CAVS Support

Last update: 2009-03-12 03:18