

Settings(DVD)

I can't find any info on the voice cancel functions of the 203G. What are they, and how do they work?

The "voice cancel" function is called Multiplex, which can mute the main singing voice in a Multiplex karaoke disc.

When a Multiplex disc is played, use the MPX button on the remote to cancel the main voice.

Unique solution ID: #1133

Author: Sales Dept.

Last update: 2015-09-15 16:53