

Settings(DVD)

Could you turn off the on screen display information permanently? eg time in upper right corner.

Dear Customer

For DVD-105, 203, 305 players, the time display should appear on the left upper corner of the TV screen. It can be turned on or off by pressing the DISPLAY button on your remote control. It will toggle between OFF, TIME REMAINING, TIME PROGRESS, ... Given that we have different positions of the display, please let us know which player you have.

CAVS

Unique solution ID: #1151

Author: CAVS Support

Last update: 2009-10-04 09:44