

Functionality(DVD)

How do I change a song's key on CAVS DVD players?

Press the flat (b) or sharp (#) buttons to change the key. Be sure that Karaoke Mode is set to ON by pressing the MIC ON button from the remote before changing the key or tempo.

The key change can be made before or while a song is in play. After each song, the key change will be reset to the default setting.

Unique solution ID: #1131

Author: Sales Dept.

Last update: 2015-06-12 19:25