

Functionality(DVD)

How do I set up my [model] so that it stops after every song on CD+G discs?

This operation uses the "REPEAT" button on your remote. Once pressed you'll read one of the following:

- **Repeat-All:** Plays song after song continuously and then repeat the disc.
- **Repeat-One:** Will repeat the song in which Repeat-one was initialized.
- **Repeat-Off:** Will stop after every song.

Unique solution ID: #1015

Author: CAVS Support

Last update: 2009-03-12 03:20