

Functionality(DVD)

How do you change the tempo (speed) of songs in DVD-105G, 203G, 305G or USB player?

From the front panel, press the Fast Forward (>>) or Fast Backward (<<) buttons to change the tempo while a song is in play.

From the remote control, press Right key(>) or Left key(<) while a song is in play.

From the remote control, press Subtitle key or Angle key to change the tempo before a song is in play.

Note that at the end of each song, the tempo control will be reset.

All above is also same for DVD-105G, 203G, 305G or their USB versions.

Unique solution ID: #1169

Author: CAVS Support

Last update: 2015-09-15 18:54