

# Functionality(DVD)

## **While playing a Super CD+G disc on my 105G, 203G, or 305G player, how do I remove the vocals from being played?**

When playing a Multiplex disc (with vocals in one channel) in a 105G, 203G, or 305G player, press the MPX button on the remote control or the VOCAL button on the front panel of the player (for 203G or 305G) to cancel the vocals out. Pressing the button will change the audio output from Stereo to Right or Left, thus eliminating the channel with the vocals.

Unique solution ID: #1170

Author: CAVS Support

Last update: 2015-09-15 20:35