

# Functionality(DVD)

## How to play the songs in a disc continuously

- Insert the disc into the tray.
- Using the remote control, press Repeat button for "Repeat All". The button will toggle between "Off", "Repeat One", "Repeat All".
- Select a song and play. The next songs will play continuously until the end of the disc is reached.

Unique solution ID: #1244

Author: Aaron

Last update: 2012-06-29 10:08