

3D Customer Interface / Touch Screen

How to operate 3D Customer Interface

1. Tap on any of Title, Artist, or Index button at the top to view the song list sorted accordingly.
2. Scroll the song list by dragging on the scroll bard at the right.
3. Search for a song by tapping on the search field which will bring up the Onscreen Keyboard. Type in a few letters (of the word you are searching for) to see the matching songs, and continue typing to narrow the matching song list.
4. Tap on a song and a popup window will appear with
 - Customer name
 - Pitch control
 - Tempo control
5. Tap on the Customer name field to bring up the Onscreen Keyboard to type in a customer name. Drag the Pitch and Tempo buttons to adjust your setting. Next tap on Reserve to reserve the song or Cancel to cancel your selection. Note that Customer name, Pitch control, and Tempo control do not need to be specified before reserving the song.
6. When a song is reserved, the 3D Customer Interface screen will change to the Queue which lists all the reserved songs. Press Play, Pause, Stop, or Next to proceed. Press on the numeric button of any reserved song to change the order of the song (to the top or bottom) or delete.
7. During play, tap on the Control button at the top to see a popup window of Pitch control, Tempo control, and Voice cancel. You can adjust the controls during play.

Unique solution ID: #1242

Author: Aaron

Last update: 2012-06-23 23:30